


# 475 Pro Series Replacement Cartridges Instructions

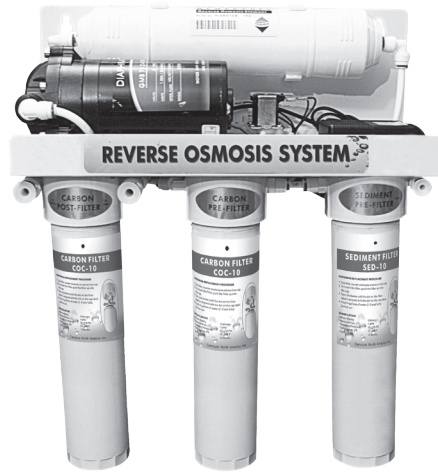

**475 Pro Series**



**475BP Pro Series**

## Installing the Filters

To install the filter simply push it up inside the cap and turn clockwise until the arrow aligns with the center of the cap. To remove the filter reverse the procedure.

The filter head contains an Automatic Shut-off Device. This enables the filters to be changed without shutting the inlet water off. A small amount of water may leak out during the installation or removal.



## Note

It is a good idea to be aware of where the inlet water valve is located so that it can easily be turned off if any unforeseen problems are encountered.

## DIRECTIONS FOR CHANGING FILTERS

HOW OFTEN YOU CHANGE YOUR FILTERS VARIES ON THE QUALITY OF WATER COMING TO THE RO AND THE AMOUNT OF WATER PRODUCED BY THE RO. THE RO FILTERS SHOULD BE CHANGED AT LEAST EVERY YEAR, BUT IF WATER QUALITY IS LOW OR HIGHER AMOUNTS OF WATER ARE USED, IT IS RECOMMENDED THAT THEY BE CHANGED MORE OFTEN. FILTERS CANNOT BE CHANGED TOO OFTEN.

### PRE FILTERS:

1. There is no need for you to turn the water off when changing your filter cartridges.
2. Simply twist and pull down on the cartridge filter to remove it.
3. To install the new cartridge filter simply twist and push up to install it

